



Bedienungsanleitung



AIREX Lager-/Transportwagen Stand-Alone

Art.Nr.: 03014

▶▶▶ [zum Produkt...](#)

Gerätewagen & Ballwagen

▶▶▶ [zur Kategorie...](#)

AIREX □ Mat rack / Assembling manual



Necessary tools



Allen key size 4 and 5

Material

- ① 4 pcs. M6x25 cheese head
- ② 4 pcs. Shim M6
- ③ 4 pcs. M6x16 counter sunk
- ④ 4 pcs. rosette M6
- ⑤ reinforcing frame (1 pc.)
- ⑥ base plate with 4 wheels (1 pc.)
- ⑤ rods (4 pcs.)
- ⑥ connecting piece (2 pcs.)
- ⑦ matholder-poles (4 Stk.)
- ⑧ strut (2 pcs.)
- ⑨ holder with
AIREX □ Logo (2 pcs.)

Step 1


According to the pictures below unpack the material and bolt the rods ⑤+⑥ together as strong as possible

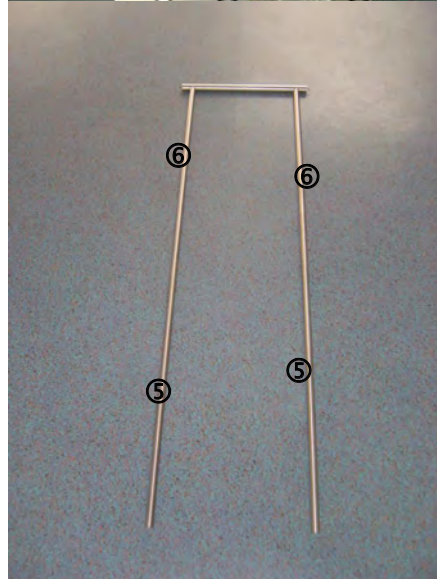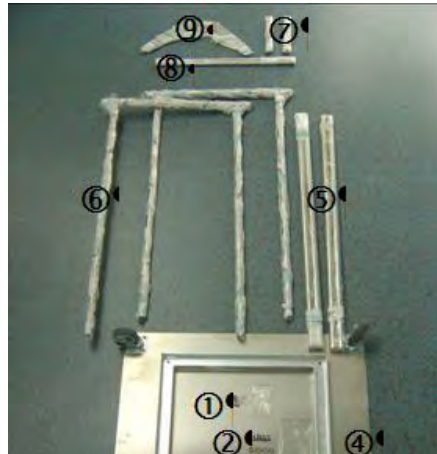

Step 2

Tighten the reinforcing frame ③ and both precasted rods and connecting pieces ⑤+⑥ on the base plate. (bolts ① M6 x 25mm with shim M6)


Please take care that you hold the bolts strictly horizontal. They could easily deform. We advise you to do this assembling with another person.

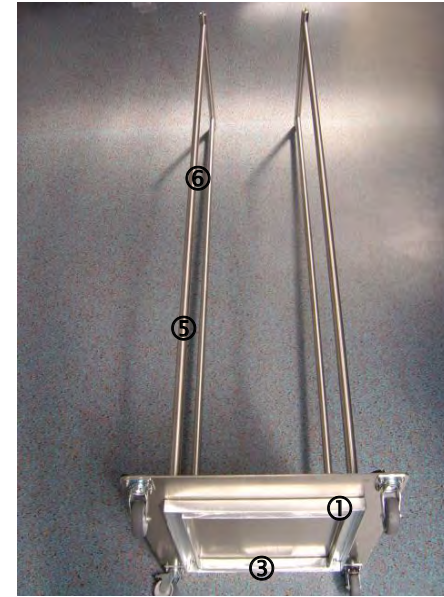

It is important to bolt the precasted rods on the longer sides of the base plate. Otherwise, the whole construction becomes awry.

Step 3

Now connect the holder ⑨ with the rods on both sides. We use the matholder-poles ⑦ and twist them into the thread. Afterwards we put on the struts ⑧ with the 16mm-bolts and the rosettes ②.

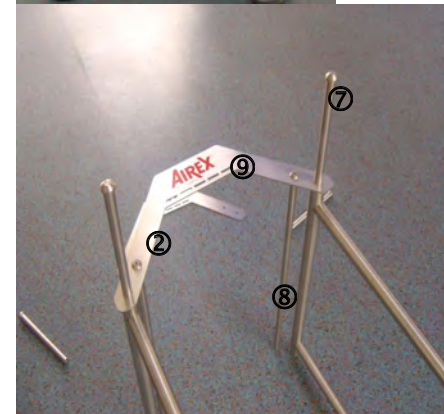



Sport-Tec
Physio & Fitness

Lemberger Straße 255
D-66955 Pirmasens

Tel.: 06331/1480-0
Fax: 06331/1480-220

info@sport-tec.de
www.sport-tec.de